

user guide



Wireless Headset with LED Display

**FCC Notice:**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Caution:**

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and users' authority to operate the equipment.

**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Radiation Exposure Statement:**

To comply with the FCC RF exposure compliance requirements, this device must not be co-located or operating in conjunction with any other antenna or transmitter.

**Industry Canada Notice**

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications of the RSS210.

Kyocera is a registered trademark of Kyocera Corporation. All other trademarks are the property of their respective owners. Copyright © 2006 Kyocera Wireless Corp. All rights reserved.

# CONTENTS

---

Introduction . . . . .	1
Getting to know your headset . . . . .	1
Charging the Headset. . . . .	1
Switching the Earhook . . . . .	2
Powering the headset on and off . . . . .	2
Pairing the headset to your mobile phone. . . . .	2
Show caller ID. . . . .	2
View phone book . . . . .	3
Making calls . . . . .	3
Receiving calls. . . . .	4
Reject calls . . . . .	4
Ending calls . . . . .	4
Transfer calls. . . . .	4
Adjust the volume . . . . .	4
Muting the headset . . . . .	4
Three way calling . . . . .	4
Visual and audible indicators. . . . .	5



# WIRELESS HEADSET

## WITH LED DISPLAY

The Wireless Headset with LED Display is a sleek wireless headset that enables comfortable handsfree communication with your Bluetooth® enabled wireless technology cell phone.

Talk time: Up to 14 hours

 
Standby time: Up to 200 hours

## Introduction

### Bluetooth Technology

The range of operation between Bluetooth wireless technology-enabled devices is about 10M (approx. 33 ft.). These devices do not require line of sight and can transmit through walls and other non-metal obstacles. Thick or reinforced concrete can limit the range.

## Getting to know your headset

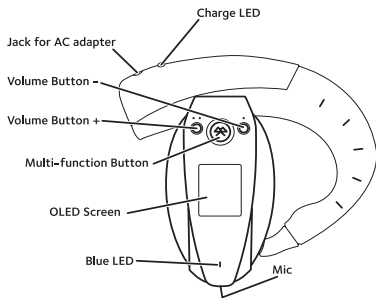

Your package contains the following items:

- (A) Wireless headset
- (B) Earhook
- (C) Fit Ring
- (D) Travel Charger
- (E) User Guide

## Charging the Headset

Before using the headset, you must charge it for a minimum of two hours. When fully charged, the battery provides up to five hours of talk time, and up to 120 hours of standby time.

1. Plug the AC adapter connector into the AC jack on the earhook.

**Note:** The Amber LED on the earhook will light while the headset is charging. When charging is complete, the Amber LED will turn off.

2. Unplug the AC adapter connector from the AC jack.

## Battery Status Indicator

The amber LED on the earhook will remain lit while the battery is charging. When charging is complete, the LED will turn off and the battery icon on the screen will indicate that the battery is fully charged.


## Switching the Earhook

The earhook can be switched to the opposite side of the unit in order to use it on either ear.


- Gently pull the earhook from the main unit and plug it in to the identical hole on the opposite side.

## Powering the headset on and off

### Turn the headset on

Press and hold  for three or four seconds. “On...” displays briefly on the screen, and a tone will sound. The headset then goes into “Standby” mode. If you have paired the headset with a mobile phone, it is ready to make and receive calls.

### Turn the headset off

When the headset is on, press and hold  for approximately two seconds. “Off...” displays briefly on the LED and “off” tone will sound.


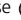 
## Pairing the headset to your mobile phone

Pairing is the process of linking the headset with your mobile phone. After pairing is complete, the headset can only be used with the mobile phone with which it was paired. If you wish to use the headset with a different mobile phone, you must repeat the pairing process with the new mobile phone. When you do this, the headset will no longer work with the previous mobile phone.


**Note:** Before pairing the headset, ensure that the battery is fully charged.

## Pair the device

Ensure that the headset and mobile phone are turned off.

1. Press and hold the **Multi-function button** () for five seconds. “Pairing...” displays on the screen, and you will hear a tone.
2. Release . The headset is now in Pairing Mode.
3. Turn on the mobile phone and place it within 10M (33 ft.) of the headset.
4. Initiate the device discovery feature on the mobile phone. Refer to the phone’s user guide for instructions for initiating this feature.
5. When prompted by the mobile phone, enter **0000** as the pin code (or “pass code,” or “pass key”). When pairing is completed, “Ready” displays briefly on the screen.





## To cancel pairing mode

While you are in pairing mode, you can cancel the pairing process, and turn off the headset. Press and hold  for three seconds. “Off...” displays on the screen, and you will hear a tone.

## Show caller ID



Caller ID is automatically enabled on your headset. You can disable the Caller ID display function to ensure that others cannot see your caller ID information.

## To disable the caller ID display

1. In standby mode, press and hold  then  in any order. A previously dialed or received number displays on the screen.
2. While a number displays on the screen, press both  and  simultaneously. "ID blocked" displays on the screen.

When you receive any incoming phone calls "ID blocked" displays rather than the phone number.

## To enable the caller ID display



When the caller ID display function is disabled, press both  and  simultaneously. "ID enabled" displays on the screen. When you receive any incoming phone calls the number displays on the screen.

## View phone book

You can view and browse your mobile phone's phone book directly from the headset.

**Note:** This feature must be supported by your mobile phone.



To view and browse your mobile phone's phone book:

1. Ensure the headset is in standby mode.
2. Briefly press either  or  to display the number on the screen.

**Note:** View mobile phone's phone book will enable the show caller ID function.

## View the last five calls on the headset

To access the last five calls on the headset:

1. Ensure your headset is in standby mode.
2. Briefly press  or .
3. Repeatedly press the button to cycle through the last five calls.

## Making calls

You can make calls from your mobile phone, or directly from your headset using voice dialing, last number redial, and dial phone book commands.




### Make calls from your mobile phone

Dial the call from the your mobile phone.

Depending on the mobile phone you are using, the call may be automatically connected to your headset, or you may need to manually transfer it. Refer to your mobile phone user guide for more information.


### Make calls using phone book

**Note:** This feature must be supported by your mobile phone.

1. Press either  or  to access the phone numbers from your phone book.
2. Press  on your headset. The call is automatically connected to your mobile phone.



### Make calls using voice dialing

**Note:** This feature must be supported by your mobile phone.

1. Press  on your headset.
2. Speak the name of the person you wish to call. The call is automatically connected to your mobile phone.

## Make calls using last number redial


**Note:** This feature must be supported by your mobile phone.

1. Press and hold either  or .
2. Your mobile phone automatically dials the last number dialed.


## Receiving calls

You must configure your mobile phone to receive calls directly on your headset.


**Note:** Refer to the mobile phone user guide for instructions on this feature.

When your mobile phone rings, press  on your headset. The call is automatically connected to your headset.

## Reject calls

When your mobile phone rings, press and hold  for three seconds.

## Ending calls

When you have finished your call, press . The call will be disconnected.


## Transfer calls

You can transfer calls connected to your headset back to your mobile phone, or from your mobile phone to your headset


- While in a call, press  to transfer the call to or from the phone and headset.

## Adjust the volume

### To increase the volume


While in a call, briefly press  to increase volume by one step. Repeat this process until you reach the desired volume level.

### To decrease volume


While in a call, briefly press  to decrease volume by one step. Repeat this process until you reach the desired volume level.

## Muting the headset


You can mute and un-mute the microphone temporarily so that you cannot be heard.

- While in talking mode, press and hold  for three seconds, then release. A tone will remind you you are muted

### Un-mute the headset

 
When the microphone is muted, press and hold  for three seconds

## Three way calling

To enable three way calling, press and hold . "Switching..." displays on the screen.

# Visual and audible indicators

## Visual indicators

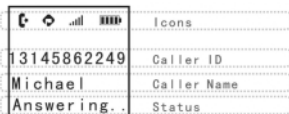

## Icons

### Headset function icons



Indicates that there is no audio connection in the headset.



Indicates that the headset is in a call.

### headset connection icons



Indicates that the headset is waiting to connect to a mobile phone.



Indicates that the headset is connected to a mobile phone.

### Volume icon



Indicates the current volume level.

### Battery icon



Indicates the current battery charge level.

## Caller ID

Status	Indicator
Show caller ID enabled	ID enabled
Show caller ID disabled	ID blocked

## Headset status

Status	Indicator
Standby	Standby
Pairing	Pairing
Trying to connect to the phone	Connecting...
Finish connecting to the phone	Ready

Operation	Operation status indicator
Power on	On...
Power off	Off...
Incoming call	Ring
Accept incoming call	Answered
Reject incoming call	Reject
Last number redial	Redial
Voice dial	Voice dial
Call phone book/stored numbers	Calling...
Three way call	Switching...

<b>Operation</b>	<b>Operation status indicator</b>
Disable show caller ID	ID blocked
Enable show caller ID	ID enabled

## **Audible indicators**

Tones heard through the headset serve as audible indicators of requested actions.

<b>Tone</b>	<b>Indicators</b>
On	headset has been turned on
Off	headset is about to turn off
Pairing	headset has been put into pairing mode

## CONSUMER LIMITED WARRANTY

Kyocera Wireless Corp. (“KYOCERA”) offers you a limited warranty that the enclosed product or products (the “Product”) will be free from defects in material and workmanship for a period that expires one year from the date of sale of the Product to you, provided that you are the original end-user purchaser of the Product and provided that your purchase was made from an authorized supplier. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. This limited warranty is applicable only to end users in the United States and Canada.

KYOCERA shall, at its sole and absolute discretion, either repair or replace a Product (which unit may use refurbished parts of similar quality and functionality) if found by KYOCERA to be defective in material or workmanship, or if KYOCERA determines that it is unable to repair or replace such Product, KYOCERA shall refund the purchase price for such Product, provided that the subject Product (i) is returned, with transportation prepaid, to a KYOCERA authorized service center within the one year warranty period, and (ii) is accompanied by a proof of purchase in the form of a bill of sale or receipted invoice which evidences that the subject Product is within the one year warranty period (“Proof of Purchase”). After the one year warranty period, you must pay all shipping, parts and labor charges.

This limited warranty does not cover and is void with respect to the following: (i) any Product which has been improperly installed, repaired, maintained or modified; (ii) any Product which has been subjected to misuse (including any Product used in conjunction with hardware electrically or mechanically incompatible or used with accessories not approved by KYOCERA), abuse, accident, physical damage, abnormal operation, improper handling, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature; (iii) any Product operated outside published maximum ratings; (iv) cosmetic damage; (v) any Product on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) cost of installation, removal or reinstallation; (vii) signal reception problems (unless caused by defects in material and workmanship); (viii) damage the result of fire, flood, acts of God or other acts which are not the fault of KYOCERA and which the Product is not specified to tolerate, including damage caused by mishandling, shipping and blown fuses; (ix) consumables (such as fuses); or (x) any Product which has been opened, repaired, modified or altered by anyone other than KYOCERA or a KYOCERA authorized service center. **USE ONLY KYOCERA APPROVED ACCESSORIES WITH KYOCERA PHONES. USE OF ANY UNAUTHORIZED ACCESSORIES MAY BE DANGEROUS AND WILL INVALIDATE THE PHONE WARRANTY IF SAID ACCESSORIES CAUSE DAMAGE OR A DEFECT TO THE PHONE.**

KYOCERA SPECIFICALLY DISCLAIMS LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, PUNITIVE, EXEMPLARY, AGGRAVATED, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF, WHETHER FORESEEABLE OR UNFORESEEABLE OF ANY KIND WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, UNANTICIPATED BENEFITS OR REVENUE, ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT) OR CONTRIBUTION OR INDEMNITY IN RESPECT OF ANY CLAIM RELATED TO A PRODUCT. REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR REFUND OF THE PURCHASE PRICE RELATING TO A DEFECTIVE PRODUCT, AS PROVIDED UNDER THIS WARRANTY, ARE YOUR SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF THE LIMITED WARRANTY, AND SUBJECT TO THIS WARRANTY, THE PRODUCTS ARE APPROVED AND ACCEPTED BY YOU "AS IS". KYOCERA MAKES NO OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF ANY KIND, ORAL OR VERBAL, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, WITH RESPECT TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT OR ANY IMPLIED WARRANTY OR CONDITION ARISING OUT OF TRADE USAGE OR OUT OF A COURSE OF DEALING OR COURSE OF PERFORMANCE. NO DEALER, DISTRIBUTOR, AGENT OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION OR ADDITION TO THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

For warranty service information, please call the following telephone number from anywhere in the continental United States and Canada:

1-800-349-4478 or 858-882-1401; or contact KYOCERA at the following address:

10300 Campus Point Drive, San Diego, California, 92121-1582, USA, Attention: Technical Support.

**DO NOT RETURN YOUR PRODUCTS TO THE ABOVE ADDRESS.** Please call or write for the location of the Kyocera Wireless Corp. authorized service center nearest you and for procedures for obtaining warranty service.